

# Oberwerk® Series 2000 Grip-Action Monopod Instructions



**Fig. 1**



**Fig. 2**

## Removing the Quick-Release Plate

Loosen the chrome thumbscrew on the upper left side of the head. Pull down on the chrome-plated flat release lever just under the front of the head and slide the Quick-Release plate out.

## Attaching the Quick-Release Plate to the Binocular

Using the flip-up thumb screw on the bottom of the quick-release plate, finger-tighten the ¼" mounting stud into the bottom of your binocular or L-adapter.

## Extending the Monopod Leg

Use the small lever-type clamps on the leg sections (Fig. 2) to adjust the monopod to the desired height.

## Using the Grip-Action Ball Head

Pointing the side of the head with the grip-action lever (Fig. 1) away from you, firmly grip the grip-action lever in one hand while holding the top of the monopod in the other hand, adjust the head to the desired attitude and release the lever to lock in place.

## Ball Head Adjustment Range

The vertical adjustment notch (Fig. 1) indicates the location where the head can be pulled back all the way to 90 degrees elevation. Simply rotate the bottom part of the ball head until the vertical adjustment notch is positioned in the desired location.

## Attaching the Binocular

With the binocular attached to the Quick-Release plate, simply slip the plate into the receiver on the head – it will snap into place. You're ready to observe!