


## Carbon Fiber Elevator Option for Oberwerk Wood Tripod

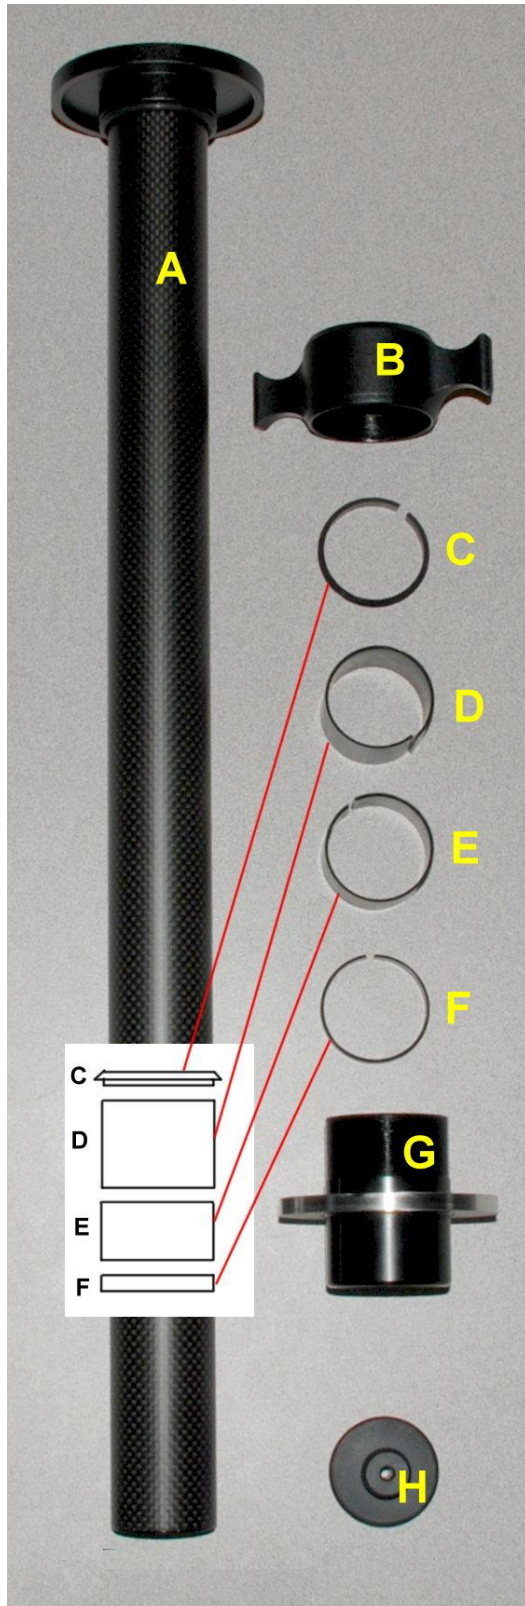

The Oberwerk Carbon Fiber Elevator option adds 18" of easily adjustable height to the Oberwerk Wood Tripod. To install it on the tripod, the elevator must be partially dissassembled.

1. Start by unscrewing the stop plug (H) found on the bottom of the carbon shaft.
2. Loosen the wingnut (B) and remove the shaft (A) from the bearing housing (G).
3. Continue to unscrew the wingnut (B) until it separates from the bearing housing (G).
4. Remove the 4-tab locking ring on the tripod top, place the bearing housing (G) in the top of the tripod, and reinstall the locking ring.
5. Thread the wingnut (B) back on to the top of the bearing housing (G), but do not tighten.
6. Insert the carbon shaft (A) into the bearing housing (G). The shaft will catch on the bearing sleeves (C-F) but with a little effort, will pass through the bearing housing (G).
7. Install the stop plug (H) into the bottom of the carbon shaft (A).

If the bearing sleeves (C-F) fall out of the bearing housing (G), note the correct order for reassembly in the picture to the left.